



MASTERS COLLECTION™

DIGITAL SCALE USE & CARE



Since 1946, The Culinary Institute of America has earned its reputation as the world's premier culinary college. Dedicated to excellence, the CIA is the prestigious training ground where many of America's great chefs have studied and honed their skills in the food arts.

Now the CIA brings this expertise to the home kitchen with the Masters Collection™, a selection of essential and extraordinary tools created by its faculty of Certified Master Chefs. Distinguished by their careful design and craftsmanship, Masters Collection™ tools provide the ultimate in performance for novice and experienced cooks alike.

*Experience the difference.
Savor the results.™*

Features

The Masters Collection™ Digital Scale conveniently and accurately weighs ingredients for baking, as well as portions for cooking, freezing or managing a special diet.

Please read these instructions before using the scale and save for future reference.

- 11 pound capacity with auto zero, plus add and weigh feature
- Gram/ounce toggle button with increments of 1 gram/0.1 ounce
- On/off button with automatic shut off after 15 minutes
- Separate tare button
- Non-slip base for added stability
- Large, easy-view LCD display and easy-clean membrane buttons
- Clear bowl for weighing ingredients fits over scale for safe and compact storage
- Bowl shape allows for easy viewing of LCD display
- Lifetime warranty

Battery Activation/Replacement

The scale comes with (2) AA batteries already installed and is ready for immediate use. Pull the plastic tab on the bottom of the scale to activate.

The "BATTERY LOW" icon will appear on the display when the battery voltage drops below 2.5V.

To replace the batteries, open the battery cover located on the bottom of the scale and remove batteries.

Insert (2) AA batteries, matching the (+) and (-) polarity marks.

Replace the battery cover.

Instructions for Use

NOTE: Remove protective film from the LCD display before use.

To Start Scale

Press "ON/OFF" button to activate.

All segments of the LCD are turned on for 2 seconds.

The display will show -88:88.8

Auto Zero

If the bowl or other container is placed on the scale prior to turning ON, then the scale automatically adjusts "Auto Zero" for the weight of the bowl/container.

- If any weight is placed on the scale before the power is turned on, the LCD displays 0lb 0oz when powered up.
- "Auto Zero" will not work, and the LCD displays "OVER" if the weight of the bowl/container is more than 2lb 3.3oz/1000g.
- After "Auto Zero", if the bowl/container is removed from the scale, the LCD displays the negative weight of the bowl/container that was removed.

If the scale is turned on without a bowl/container on the platform, then the LCD display reads 0lb 0oz.

Pound/Ounce or Gram Options

Default is lb/oz

Pressing the "(lb/oz)/g" button changes the unit to be displayed to "g".

Measures in increments of 0.1oz or 1g

Accuracy: +/-0.2 oz or +/-6 g

Tare

The "TARE" button resets the scale to zero and allows the determination of the individual weight of each new ingredient being added.

- Once an ingredient has been registered, press the "TARE" button. The LCD displays "0lb 0oz" and "TARE".
- With the TARE function activated (LCD displays "0lb 0oz" and "TARE"), if a new ingredient is added the LCD display will show only the weight of the new ingredient.
- If the TARE function is activated again, the scale resets and the LCD displays "0lb 0oz" and "TARE".
- The TARE function can be repeated until the total weight exceeds 13lb 5.4oz/6050g and the LCD displays "Err".

Maximum Weight

The maximum allowed weight for the bowl/container plus the weight of the ingredients to be measured is 13lb 5.4oz/6050g. If the weight is more than this, "Err" is displayed

Auto Shut Off

The scale will shut down automatically if there is no operation or change in weight in 15 minutes.

Unstable Condition

The scale should be operated on a level surface and in a calm environment. Upon power-up, if the scale is in an unstable condition, the LCD displays "UnS".

Maintenance

Membrane buttons are water-resistant and easy to clean.

Wipe scale with a damp cloth and dry with a soft towel. The clear bowl can be washed by hand or in the top rack of a dishwasher. Never immerse the scale in water.

The clear bowl fits over the scale for safe and compact storage.

Lifetime Warranty

Robinson Home Products Inc. promises to repair or replace any item found defective in material or workmanship under normal household use and following care instructions. Minor imperfections and slight color variations are normal. This excludes damage from misuse or abuse, such as improper cleaning, overheating, neglect, accident, fire or theft and does not apply to scratches, stains and discolorations. This warranty also excludes incidental or consequential damages. If you believe you have a defective product, send the product, freight prepaid, with a letter explaining the defect, to:

Robinson Home Products Inc.
Product Replacement Services
2615 Walden Avenue
Buffalo, NY 14225

You can also call **1-800-245-2433** or visit our website at **www.ciacook.com** for more information.

This warranty gives you specific legal rights which may vary from state to state.

EXPERIENCE THE DIFFERENCE.
SAVOR THE RESULTS.™

Distributed by
Robinson Home Products Inc.
2615 Walden Avenue
Buffalo, NY 14225

©2005. All rights reserved

Patent Pending

TM – Trademarks of
The Culinary Institute of America
used under license

UC 24700