



Since 1946, The Culinary Institute of America has earned its reputation as the world's premier culinary college. Dedicated to excellence, the CIA is the prestigious training ground where many of America's great chefs have studied and honed their skills in the food arts.

Now the CIA brings this expertise to the home kitchen with the Masters Collection™, a selection of essential and extraordinary tools created by its faculty of Certified Master Chefs. Distinguished by their careful design and craftsmanship, Masters Collection™ tools provide the ultimate in performance for novice and experienced cooks alike.

Experience the difference. Savor the results.™

Digital Timer Use & Care

The Masters Collection™ Digital Timer provides countdown, count up and stop watch functions in a compact unit that is easy to use and see.

Please read these instructions before using the timer and save for future reference.

Features

- Large easy-read display, easy-clean membrane buttons and on-off switch
- Flexible use with magnet, clip, or free-standing
- 23 hour 59 minute countdown time, set in hours and minutes
- Time changes to minutes and seconds when less than 1 hour
- Continuous alarm; count up and stop watch functions
- Lifetime warranty

Battery Activation/Replacement

To activate the battery, pull the plastic tab on the back of the timer.

The "BATTERY LOW" icon will appear on the display when the battery voltage drops below 1.2V.

Press and slide the battery cover located at the back of the timer to open. Remove battery.

Insert one AAA battery matching the (+) and (-) polarity marks. Replace the battery cover.

Instructions for Use

NOTE: Remove protective film from the front of the timer before use.

ON/OFF

The ON/OFF switch is located on the back of the timer.

Slide switch to ON position. The timer will enter the test mode in which all the display segments will be turned on for 2 seconds and the alarm will sound for 1 second.

After the test mode, 00:00 and the icons "H" and "M" will appear on the display.

To save battery life, slide switch to OFF position when the timer is not in use.

Setting Countdown Timer

SET TIME

Maximum time: 23 Hours 59 Minutes

Press "HOUR" button to set hours

Press "MIN" button to set minutes

START

Press "START/STOP" button to start timer

The H/M icons flash when the timer is operating

M/S icons flash when time is less than one hour

PAUSE

Press "START/STOP" button

Icons H/M or M/S stop flashing when the timer is paused

To Resume after Pause

Press "START/STOP" button once again to resume

Icons H/M or M/S flash again when the timer resumes counting

To Clear after Pause

Press "CLEAR" button to clear setting to 00:00

Icons H/M will appear when setting is cleared to 00:00

Alarm/Count Up

Alarm sounds immediately when countdown is finished

Count up starts immediately

Icons M/S appear and flash when count up starts

To Stop Alarm

Press "START/STOP" button once to stop alarm

Count up continues

To Stop Count Up

Press "START/STOP" button once again to stop count up

Icons M/S stop flashing when count up is stopped

Count up cannot be resumed once it has been stopped

Press "CLEAR" button to clear setting to 00:00

Stop Watch

START

Press "CLEAR" button to clear setting to 00:00

Press "START/STOP" button to start stop watch

Icons M/S appear immediately and flash

PAUSE

The "pause/resume" process can be repeated as many times as desired until the stop watch reaches the maximum count of 99 Minutes and 59 Seconds

To Pause Stop Watch

Press "START/STOP" button once to pause count up

Icons M/S stop flashing

To Resume after Pause

Press "START/STOP" button once again to resume count up

Icons M/S flash again

To Clear after Pause

Press "CLEAR" button to clear setting to 00:00

RESET

When the stop watch reaches 99(Min):59(Sec), the display will stay at 99:59, and the "99:59" display will flash

Press "STOP/START" button to stop flashing

Press "CLEAR" button to clear setting to 00:00

Lifetime Warranty

Robinson Home Products Inc. promises to repair or replace any item found defective in material or workmanship under normal household use and following care instructions.

Minor imperfections and slight color variations are normal.

This excludes damage from misuse or abuse, such as

improper cleaning, overheating, neglect, accident, fire

or theft and does not apply to scratches, stains and

discolorations. This warranty also excludes incidental

or consequential damages. If you believe you have a

defective product, send the product, freight prepaid,

with a letter explaining the defect, to:

Robinson Home Products Inc.

Product Replacement Services

2615 Walden Avenue

Buffalo, NY 14225

You can also call 1-800-245-2433 or visit our

website at www.ciacook.com for more information.

This warranty gives you specific legal rights which

may vary from state to state.

TM – Trademarks of The
Culinary Institute of America
used under license

Patent Pending

©2005. All rights reserved.

UC 24709

Made in China